MM3 Quick Manual

Ver.1.2

M3 MOBILE
Your Best Mobile Business Partner

• **Please check all items below are included in package box.**

< MM3 >

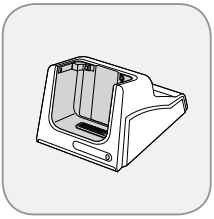

< Cradle >

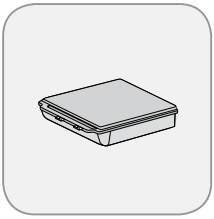

< Battery >

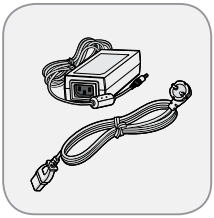

< Adaptor >

< USB cable >

< Stylus pen >

※Warning

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

DEVICE

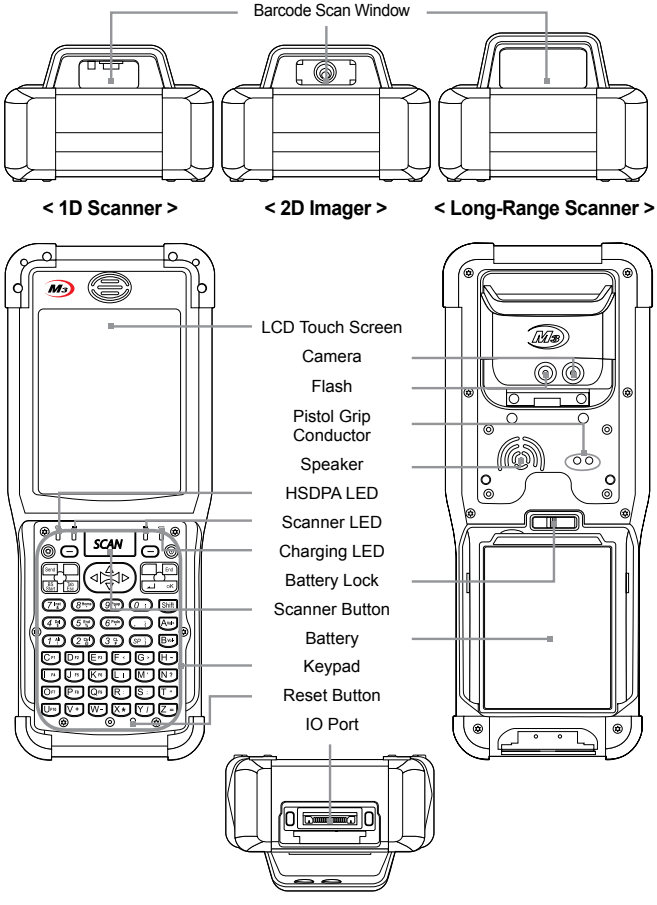
Barcode Scan Window
< 1D Scanner >
< 2D Imager >
< Long-Range Scanner >
LCD Touch Screen
Camera
Flash
Pistol Grip Conductor
Speaker
HSDPA LED
Scanner LED
Charging LED
Battery Lock
Scanner Button
Battery
Keypad
Reset Button
IO Port
SCAN

KEYPAD

MM3 has four types of keypad – 41keys, 55keys, 5250 and 3270/VT. Some function keys may not work depending on its options.

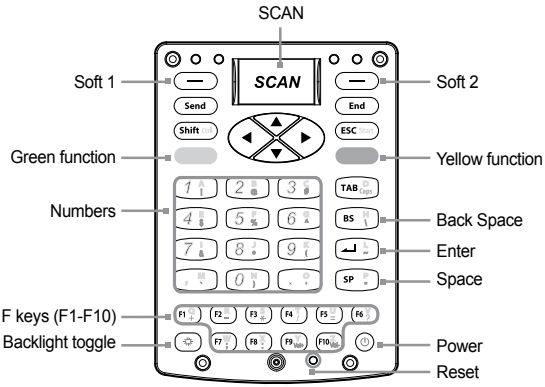

< 41 keys >

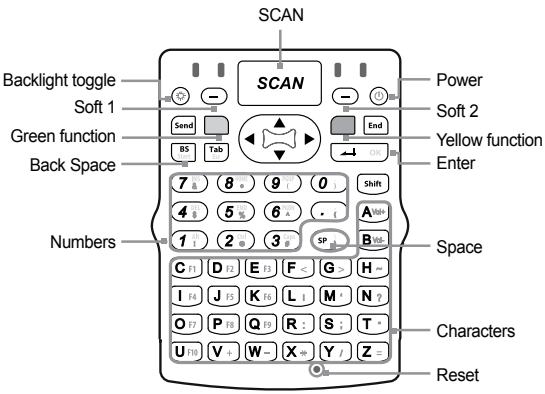

< 55 keys >

KEYPAD

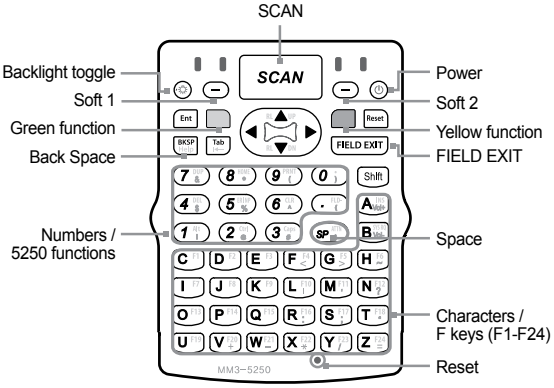

< 5250 >

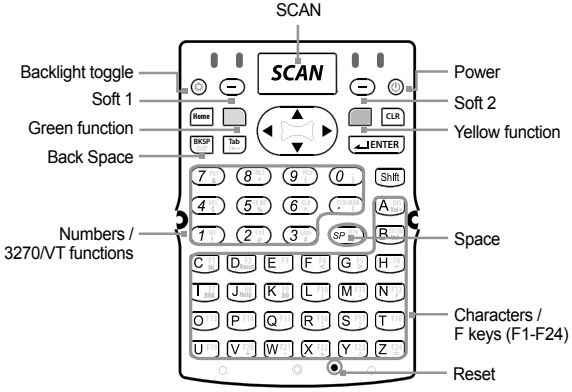

< 3270/VT >

SOFT RESET

When an unexpected error occurs while using the device, SOFT RESET allows your device to restart, similar to rebooting a computer.
It will adjust memory allocation - all records and entries are retained after soft reset but unsaved data or files may be lost.

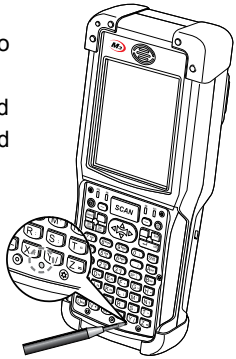

- Press the RESET BUTTON briefly.

CLEAN BOOT

When an unexpected error cannot be solved with SOFT RESET, perform CLEAN BOOT to restart the system.
It will erase all data stored in the device except in Flash Disk and return to its default settings.

Follow below steps to CLEAN BOOT. (Send + End + ⏻)

- Press the POWER BUTTON more than 10 seconds.
- Press and hold the <SEND> and <END> buttons together then press the POWER button briefly.
- When “Clean boot” sign will be displayed on the screen, press “1” to proceed CLEAN BOOT.

CARD INSTALLATION

SIM Card Installation

- Remove the battery from the battery pack.
- Insert the SIM Card as shown in the below picture.
- Insert the battery back to original position and check whether it is installed properly.

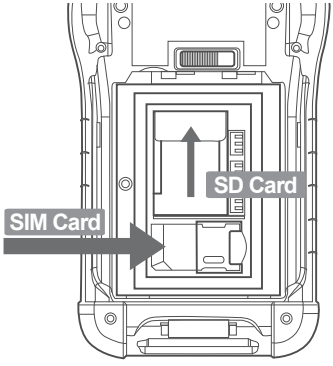

SD Card Installation

- Remove the battery from the battery pack.
- Insert the SD Card as shown in the upper picture.
- Insert the battery back to original position and check whether it is installed properly.

BATTERY

Inserting Battery

- Insert the battery to the battery pack position.
- Slide the battery lock to the left to lock the battery pack.

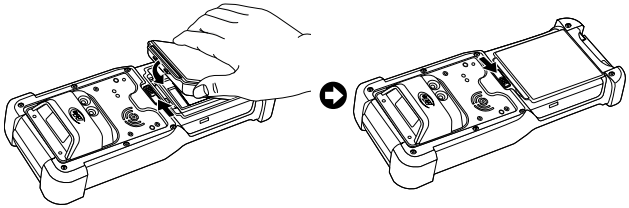

Removing Battery

- Slide the battery lock to the right to unlock the battery pack.
- Then remove the battery from the battery position.

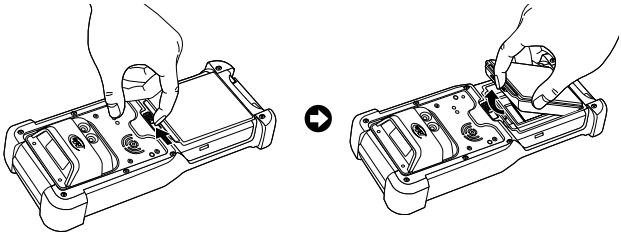

※Warning

Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions.

CHARGING

How to charge

- Supply power to the cradle using the AC charger.
- Insert the PDA to device slot to start charging the PDA.

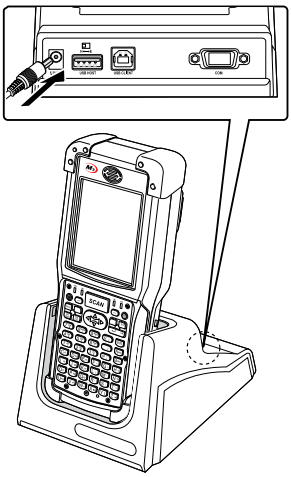

Charging status

Charging status of the PDA and the spare battery is indicated by LEDs.

LED charging indicator on the cradle indicates the charging status of the spare battery.

LED on right side in the middle of the device indicates the charging status of the battery attached to the PDA.

Battery attached to the PDA	LED color	Spare battery
The battery is being charged.	RED	The spare battery is being charged.
The battery is fully charged.	GREEN	The spare battery is fully charged.

SCANNER

Scanning

- Launch the Scanner program (either ScanEmul or M3ScanTest).
- Press the SCAN BUTTON toward barcode to read.

Make sure the laser beam covered whole barcode to read data properly.



O

X

Imaging

- Launch the Scanner program.
- Press the SCAN BUTTON toward barcode to read.

Make sure the laser beam covered whole barcode to read data properly.

O

X

※Warning
LASER LIGHT - Do not stare into beam, CLASS 2 LASER PRODUCT
1.0mW, MAX OUTPUT:650nM

CAMERA

Taking pictures

- Run the Camera program.
- Tab the Capture button to take a picture.
- Taken pictures are stored in Pictures&Videos folder.
  (Start\Programs\Pictures&Videos)

Taking videos

- Run the Camera program.
- Tab the Video Mode button to take a video.
- Taken videos are stored in Pictures&Videos folder.
  (Start\Programs\Pictures&Videos)

※Warning
It may cause significant damage to your eyes if you directly look the flash attached at camera module.

Synchronize with your PC

Please download the ActiveSync from Microsoft webpage to activesync with PC.

ActiveSync :
http://www.microsoft.com/downloads/en/details.aspx?FamilyID=9e641c34-6f7f-404d-a04b-dc09f8141141

Windows Mobile Device Center (Windows Vista and 7) :
http://www.microsoft.com/windowsphone/en-us/howto/wp6/sync/installing-wmdc.aspx

Should you require any services or technical support on M3 Mobile's products, contact your supplier or visit M3 Mobile technical support web-page http://support.m3mobile.co.kr. Desired or relevant manuals can be downloaded from Manuals or FAQ in technical support webpage.
User manual, especially, is included in Flash Disk so that MM3 users can obtain it from the Flash Disk as well.

For DOA or RMA, please send the defective product to suitable address AFTER consulting the supplier.

MEMO

Headquarter/Service Center

M3 bldg., 735-45,
Yeoksam-Dong, Gangnam-gu,
Seoul, 135-080, Korea
Tel : +82 2 574 0037
Fax : +82 2 558 1253
www.m3mobile.co.kr
sales@m3mobile.co.kr

Production Center

Chun-ui Techno Park 201-610,
202, Chun-ui Dong, Won-Mi gu,
Buchoen, Gyeonggi Do,
420-857, Korea
Tel: +82 32 623 0030
Fax: +82 32 623 0035

Copyright©2000 - 2011 M3 Mobile Co., Ltd. All Rights Reserved.